

ARB-1121 Relay Pack

For GTR-116/GTR-118

Please consult a licensed electrician if you have any questions or concerns about the installation or use of this product!!

Unit consists of all relays needed to successfully operate GTR series controllers. Makes an excellent add on for single or three phase applications.

Please use the wiring diagram on opposite side of this page to correctly wire the relay pack and the GTR-series controller. Every Relay Pack includes 3 wirings harnesses that are marked for easy recognition. Be sure that J1, J2, and J3 are installed correctly and match the wire colors to the correct pins using the wiring diagram.

Specifications:

- 5 Relays
 - 10 Amps Fuel and Automatic Transfer Switch @ 12 volts
 - 50 Amp for preheat, starter, and stop solenoids
- 12 volt coils
- Easy wiring to the following:
 - GTR-116, GTR-118 and GTR-168
- All relays needed, 1 each for the following:
 - Start
 - Pre-heat
 - Stop (When stop solenoid is used)
 - Over-Under frequency protection
- Simple to wire up
- Connection Manual included

ARB 1121

